

PROKON Support Portal

Portal > Knowledgebase > Analysis > Tension-Only and Compression-Only Elements in Sumo

Tension-Only and Compression-Only Elements in Sumo

Annemie - 2019-07-04 - 0 Comments - in Analysis

You would like certain elements in your model to be tension-only or compression-only elements

This can be changed in the input tables under the sections tab.

- First, make sure the section that you would like to set to tension or compression is has been added to the sections input table.
- In the sections input table scroll to the right of the table if you cannot see all the columns for each section.
- In the 'Constraint' column, select '*Tension*' or '*Compression*' from the dropdown list for your specific section.
- If your section should not be tension or compression, you may leave the 'Constraint' option set to 'None'.